




TECH[®]
LIGHT

INSTALLATION INSTRUCTIONS

architectural profile

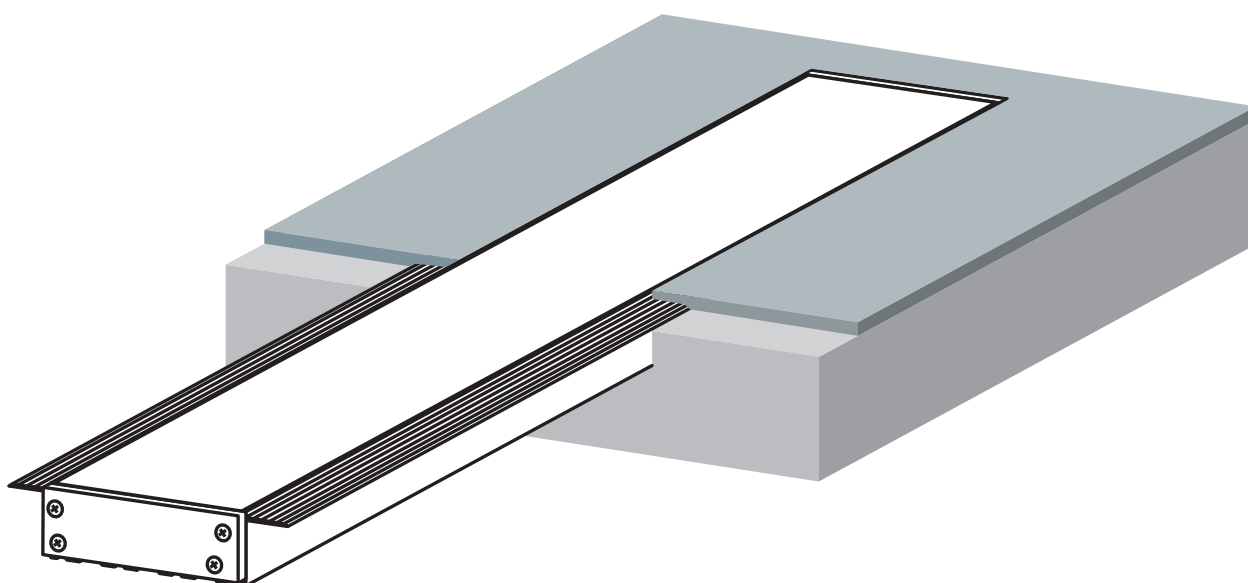

P27-7

CONTENTS

END CAPS AND MONTAGE COVER INSTALLATION	3
PROFILE INSTALLATION	4
PUTTY APPLICATION AND DEINSTALLATION OF MONTAGE COVER.....	5
LED TAPE INSTALLATION.....	6


Attention!

The profile shown in the instructions may differ in appearance from the actual product. However, the installation method remains the same.


All profiles and covers have been manufactured with a positive tolerance.
They must be cut to the required length before installation.

END CAPS AND MONTAGE COVER INSTALLATION


1

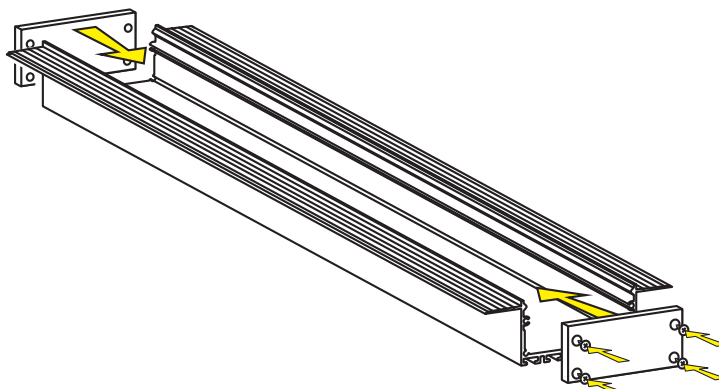

2

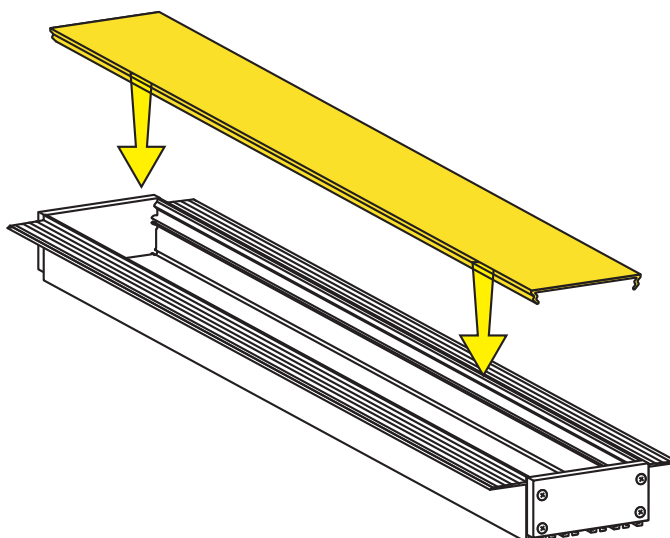

3

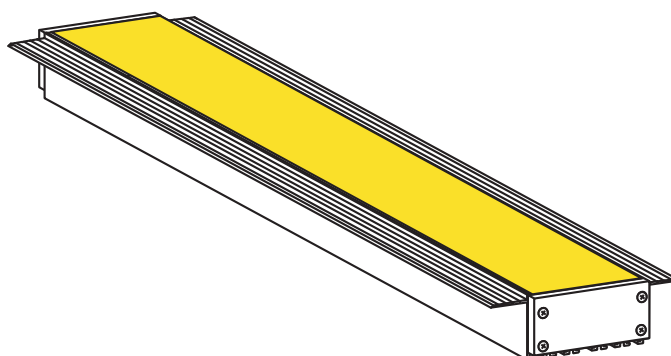


During the installation of the LED profile, the montage cover must be used.
It protects the interior of the profile from dust, dirt, and gypsum putty.


1. Install the end caps
2. Install the montage cover
3. Profile is ready for installation

PROFILE INSTALLATION




1

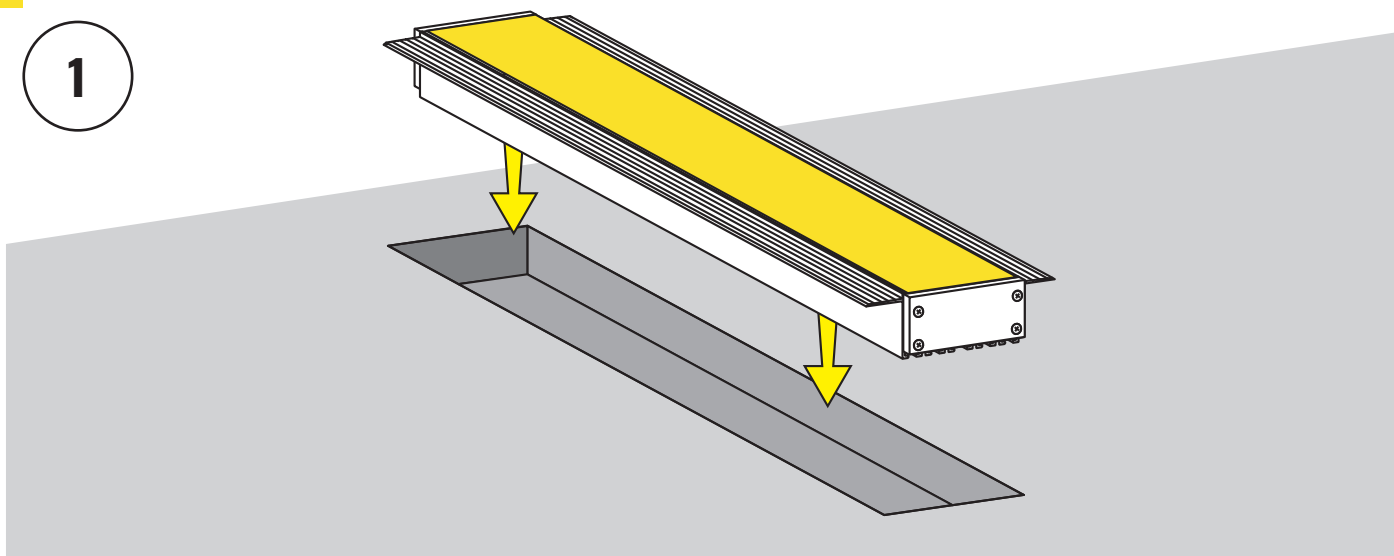

2


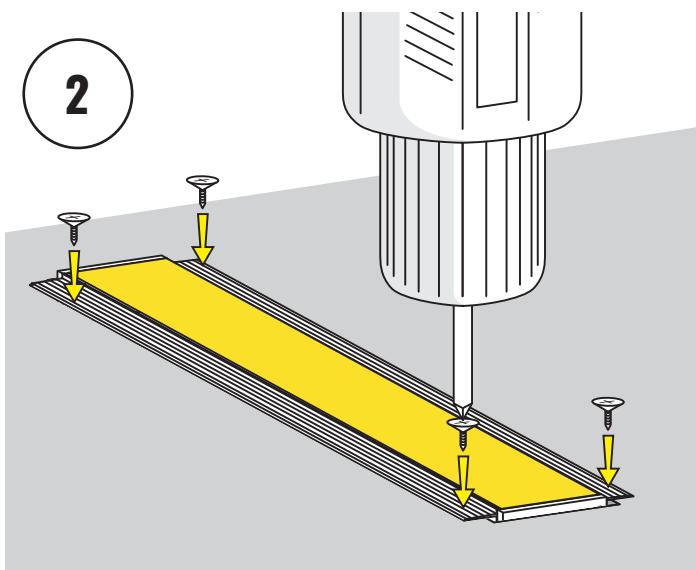


3

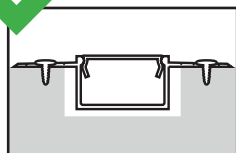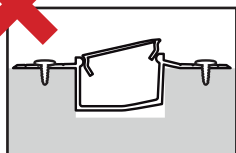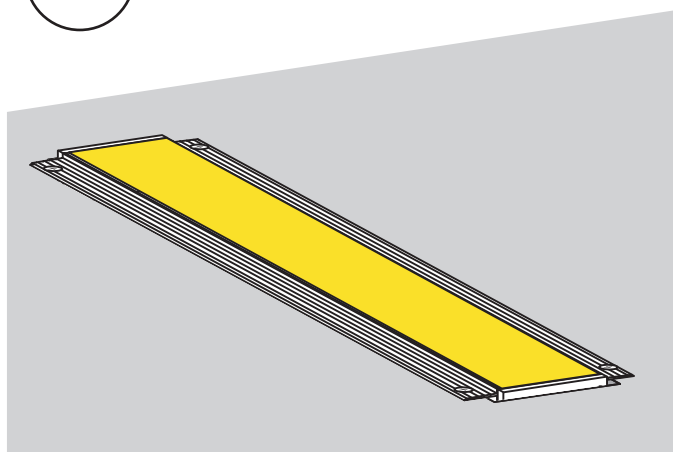

Attention!

Leave a few mm of space on the sides between the profile and the surface. Forcing the profile into too narrow a space may cause it to warp and bend.

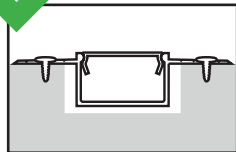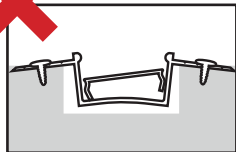


Attention!

Do not tighten the profile too much to avoid warping and bending.


1. Insert the profile into the prepared hole in the surface
2. Screw the profile in place with screws
3. Profile is ready for putty application

PUTTY APPLICATION AND DEINSTALLATION OF MONTAGE COVER


1

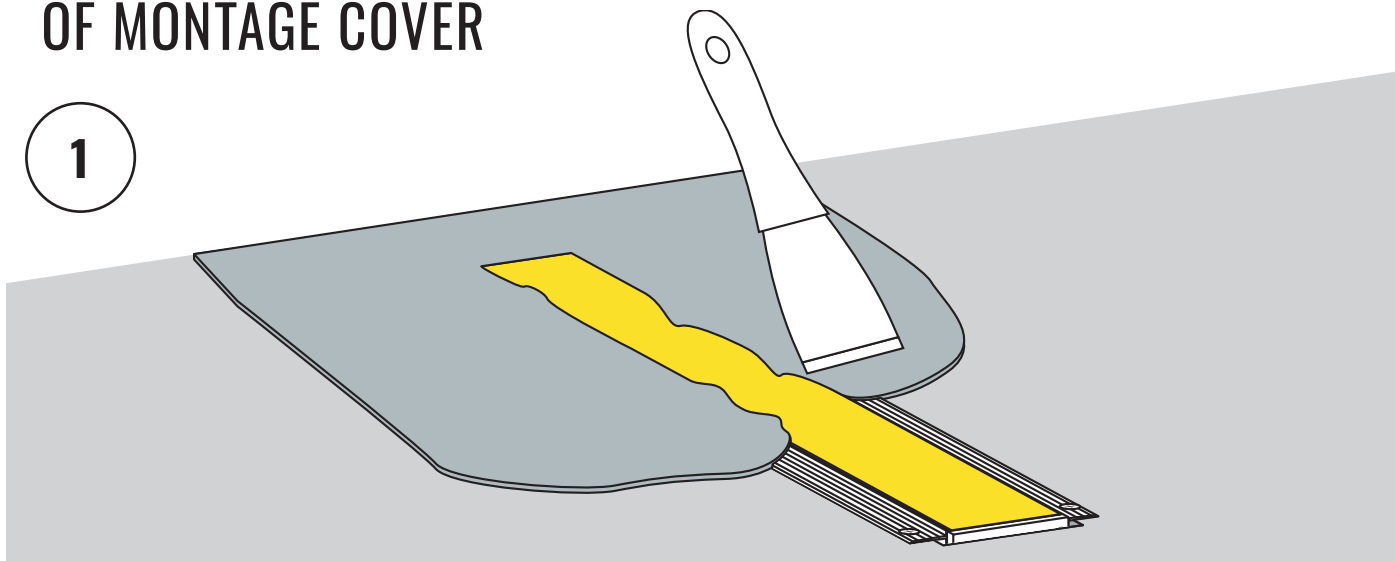

2



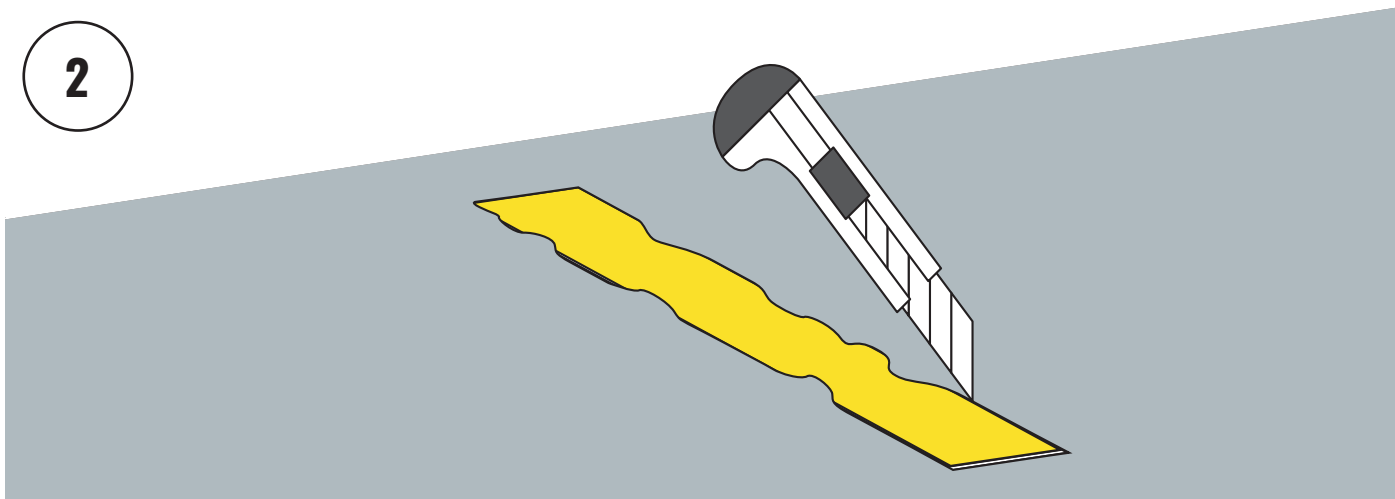


3

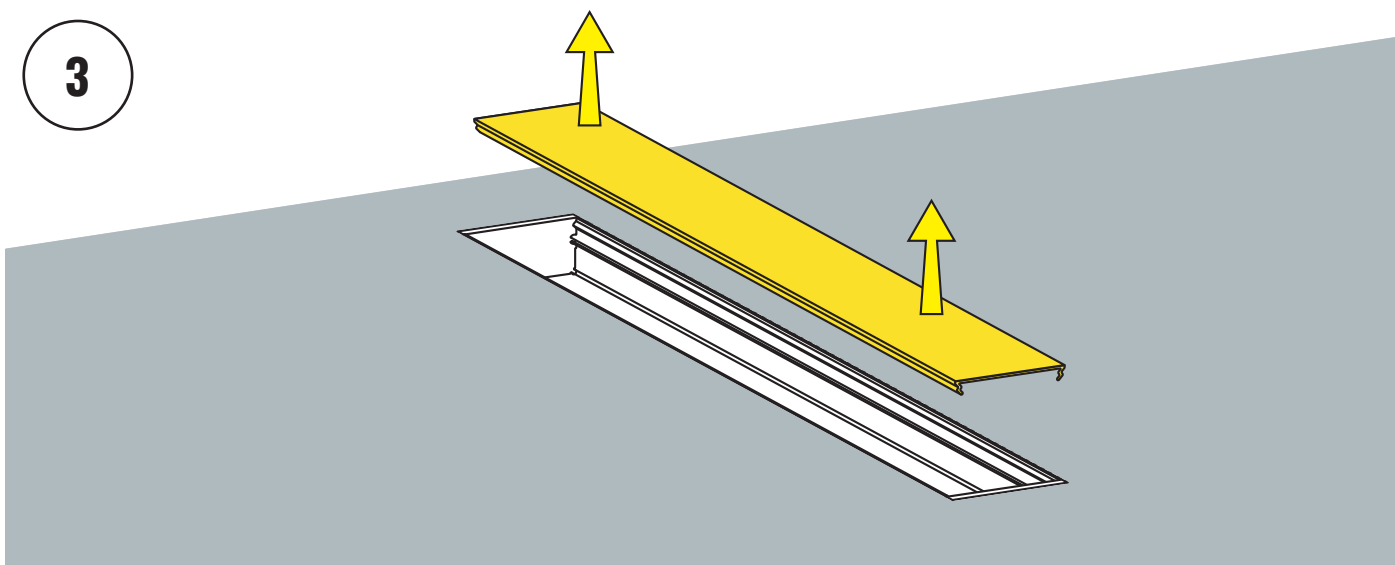

1. Apply putty and spread it evenly
2. Wait for putty to dry out and cut off the excess that overlays the profile
3. Remove the montage cover

LED TAPE INSTALLATION

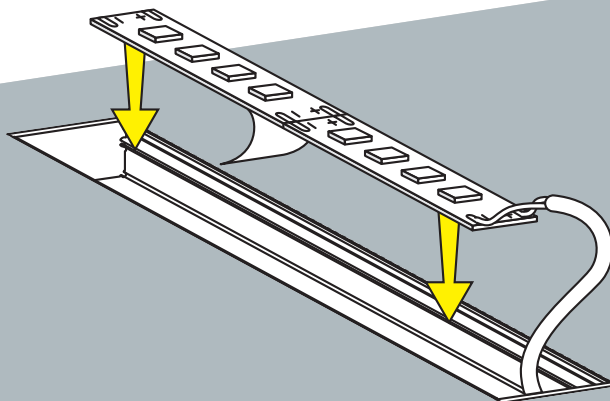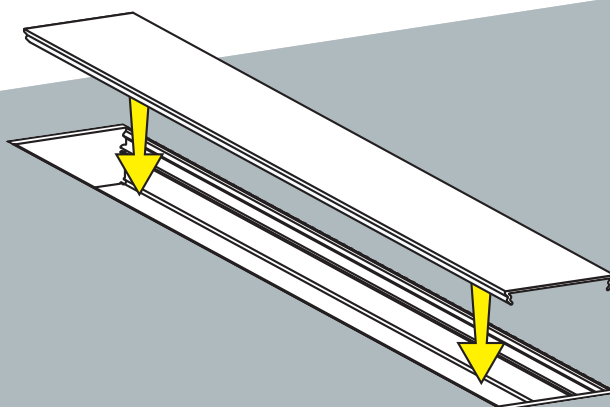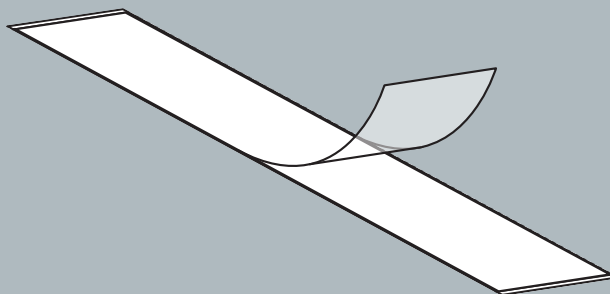1**2****3**

1. Attach the LED tape to the profile
1. Click the cover into place, starting from one side
2. Remove protective film from the cover