




TECH[®]
LIGHT

INSTALLATION INSTRUCTIONS

special profile

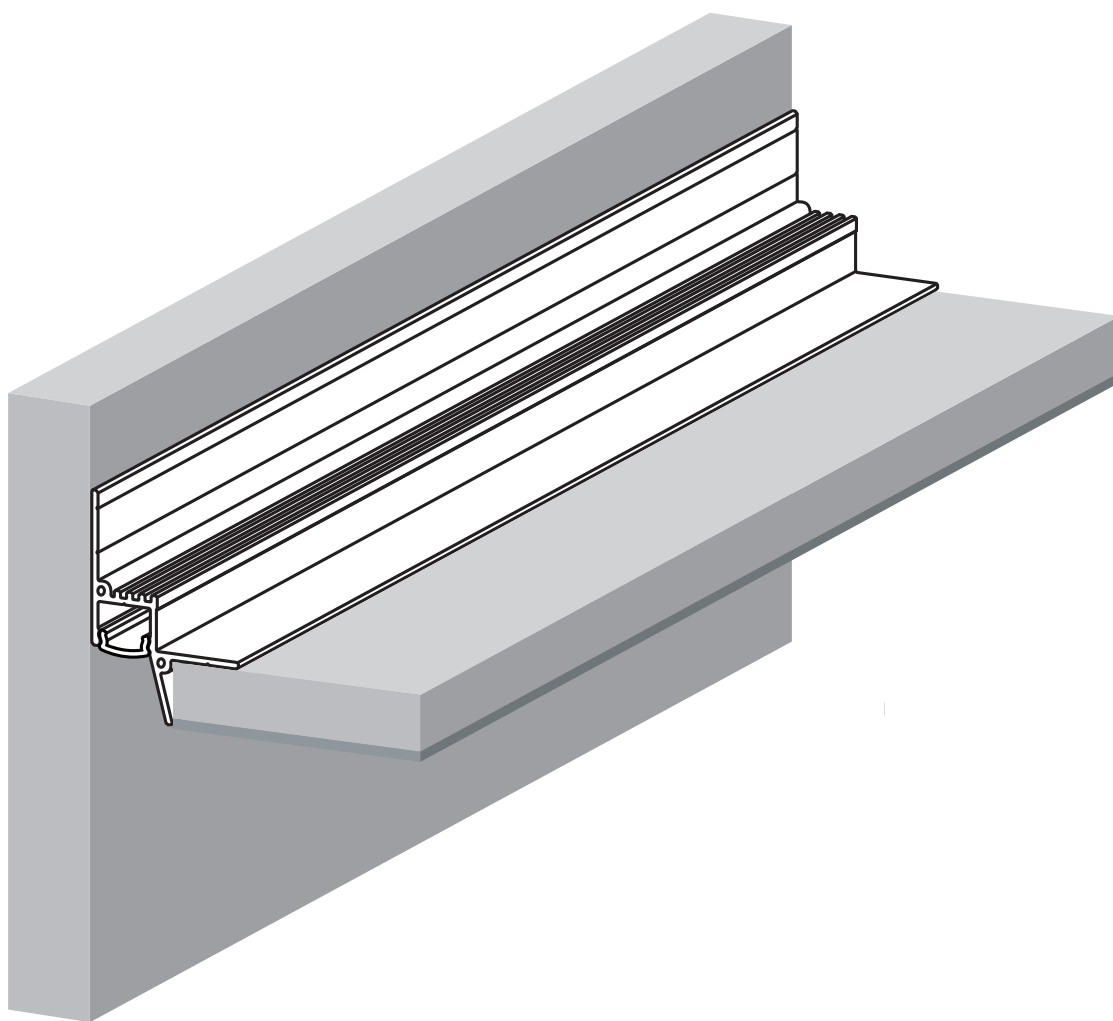

SP1-1

CONTENTS

PROFILE PREPARATION	3
PROFILE INSTALLATION TO SURFACE	4
PLASTERBOARD INSTALLATION.....	5
PUTTY APPLICATION	6
DEINSTALLATION OF MONTAGE COVER.....	7
LED TAPE INSTALLATION.....	8
COVER INSTALLATION	9



Attention!

The profile shown in the instructions may differ in appearance from the actual product. However, the installation method remains the same.

All profiles and covers have been manufactured with a positive tolerance.
They must be cut to the required length before installation.



PROFILE PREPARATION

During the installation of the LED profile, the montage cover must be used. It protects the interior of the profile from dust, dirt, and gypsum putty.

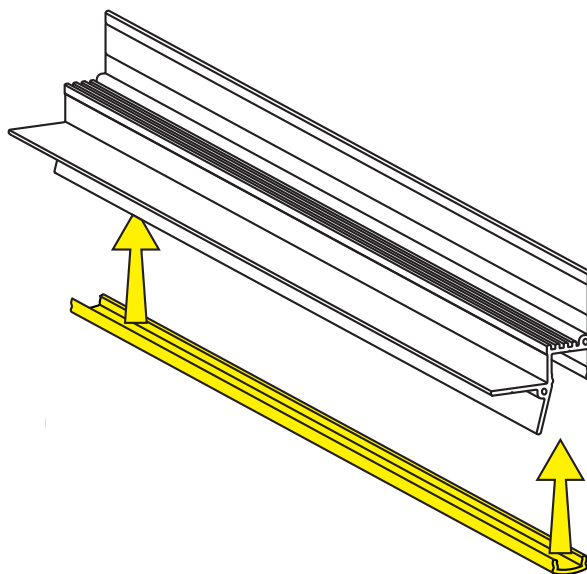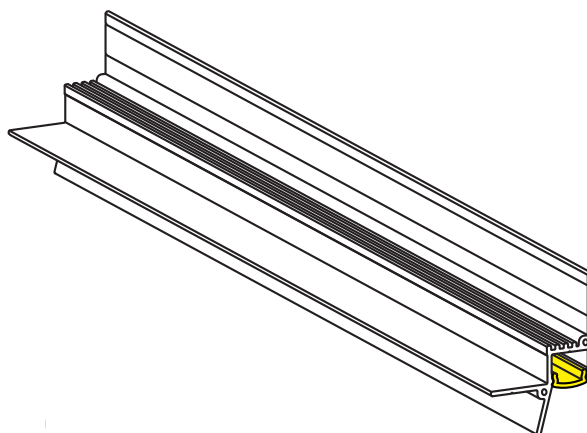1**2**



1. Install the montage cover
2. Profile is ready for next step

PROFILE INSTALLATION TO SURFACE

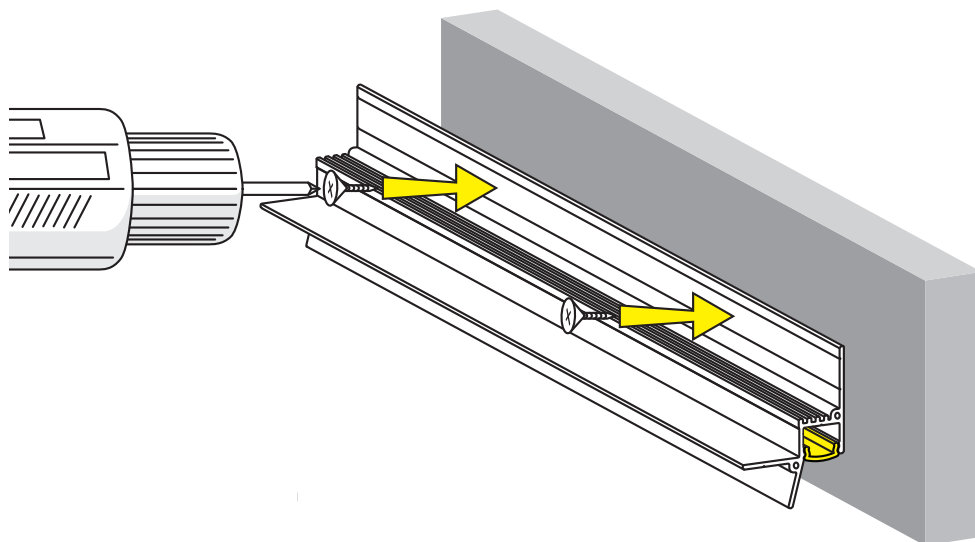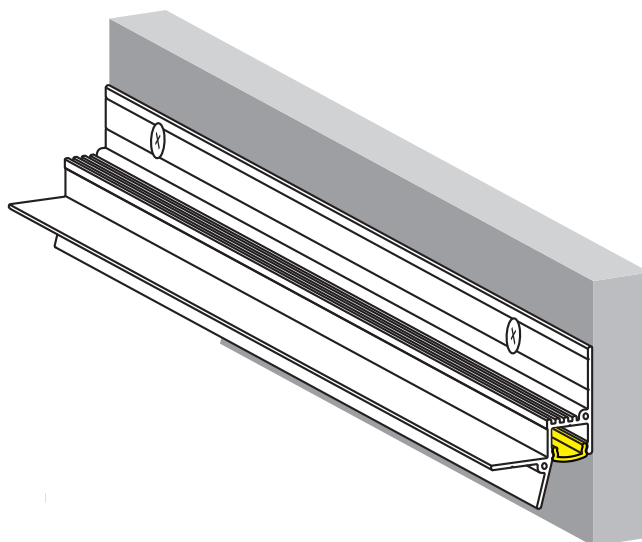1**2**

1. Screw the profile in place with screws
2. Profile is ready for next step



PLASTERBOARD INSTALLATION

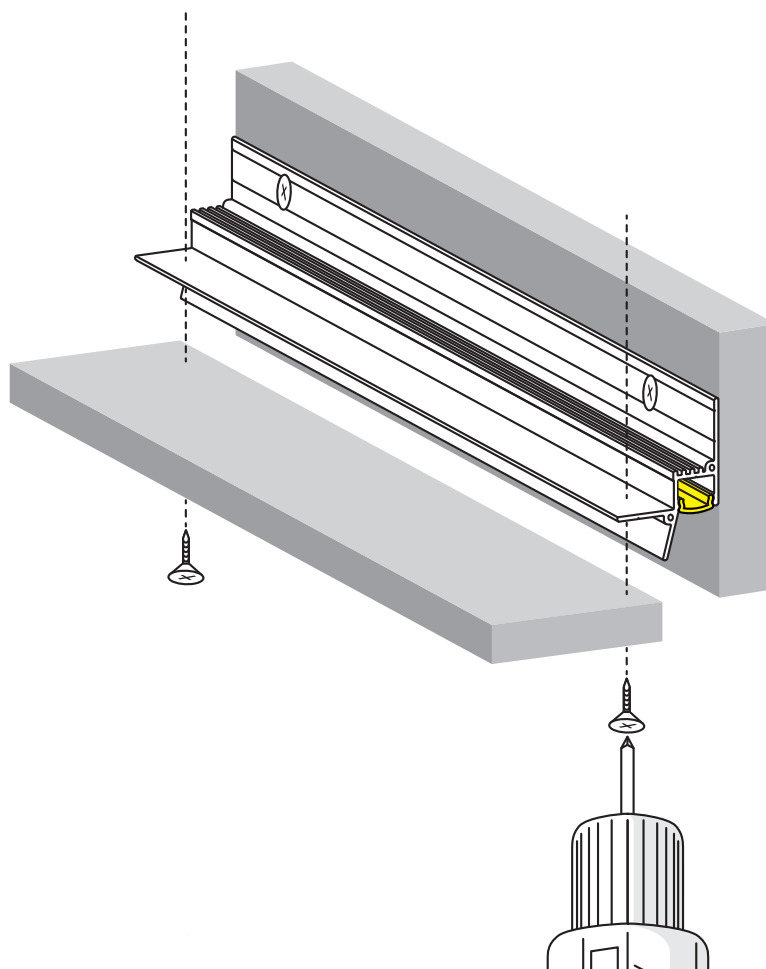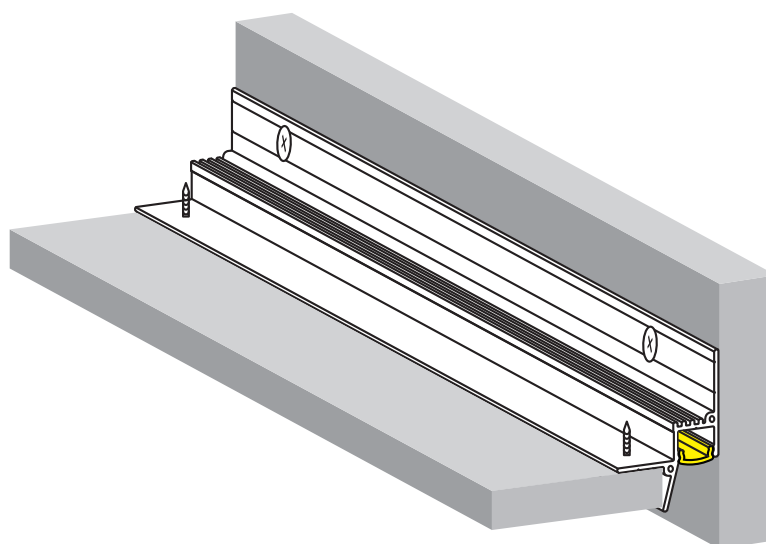1**2**



1. Screw the plasterboard in place with screws
2. Plasterboard is installed

PUTTY APPLICATION

1

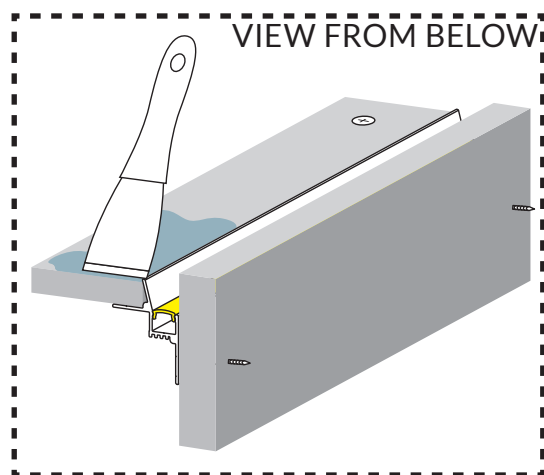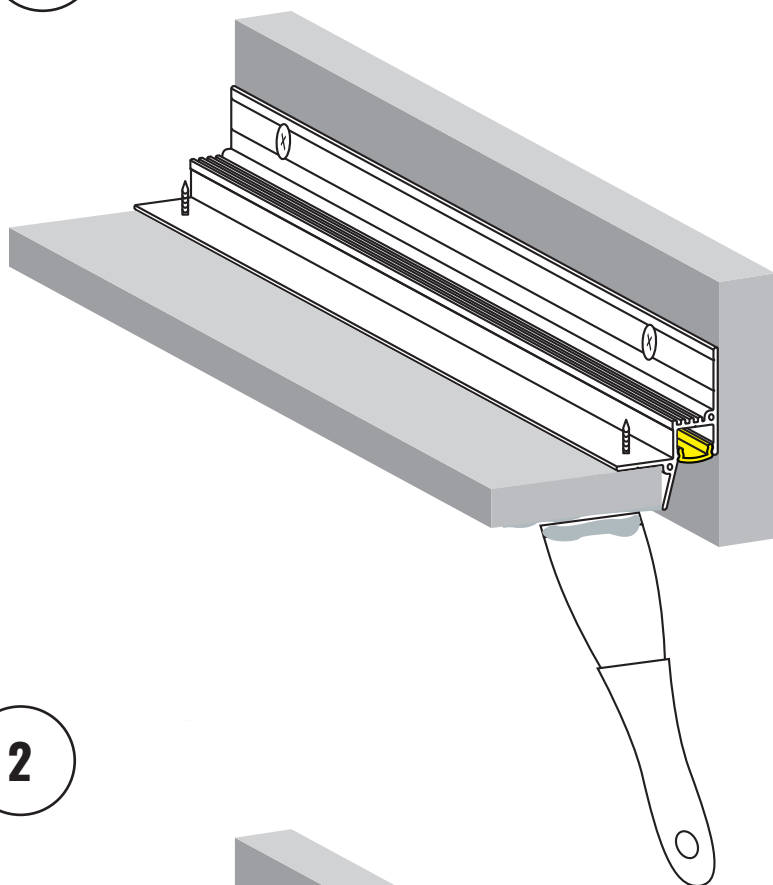


2

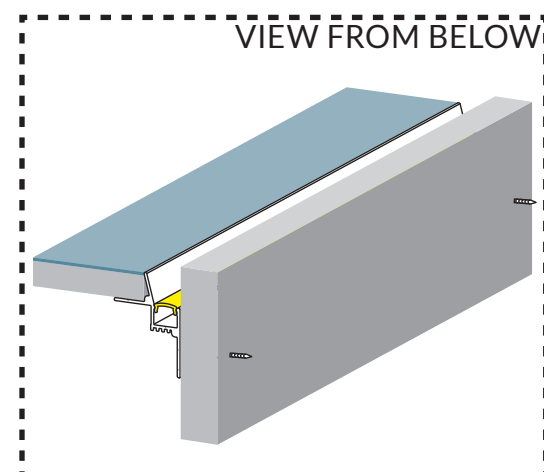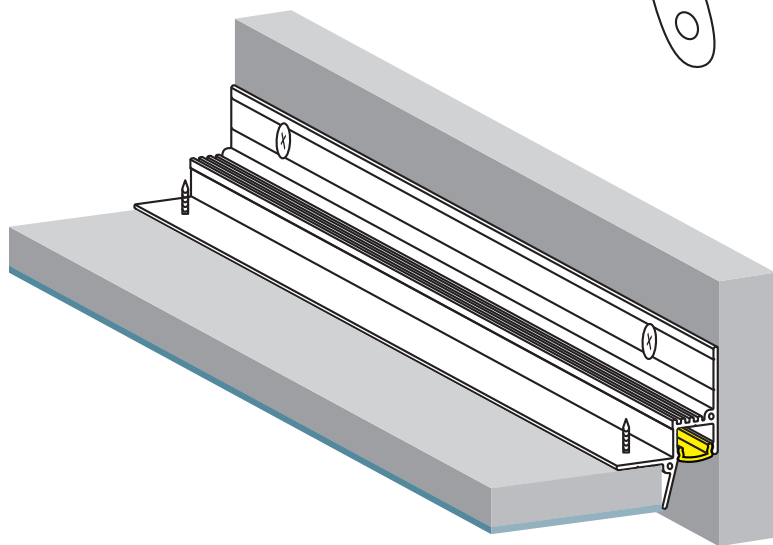


1. Apply putty and spread it evenly
2. Wait for putty to dry out

DEINSTALLATION OF MONTAGE COVER

1

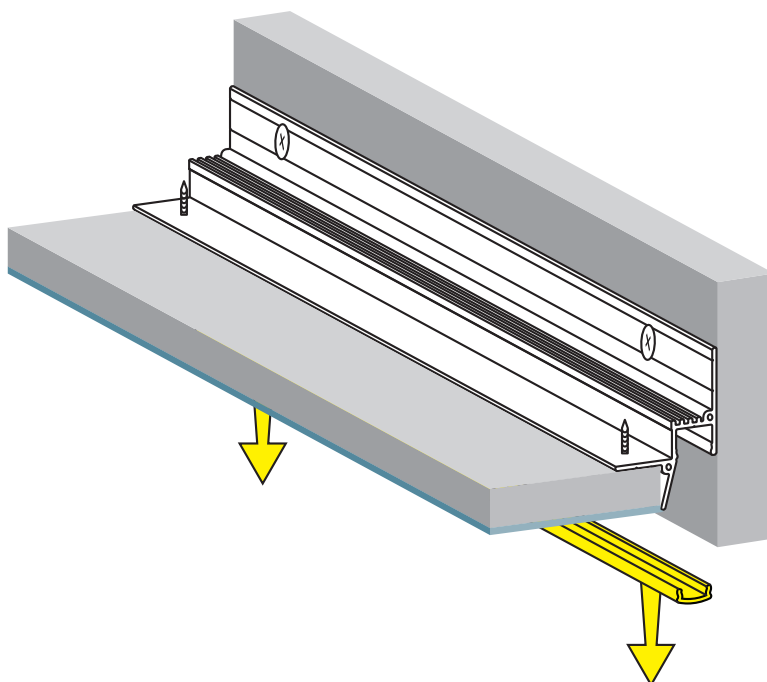


2

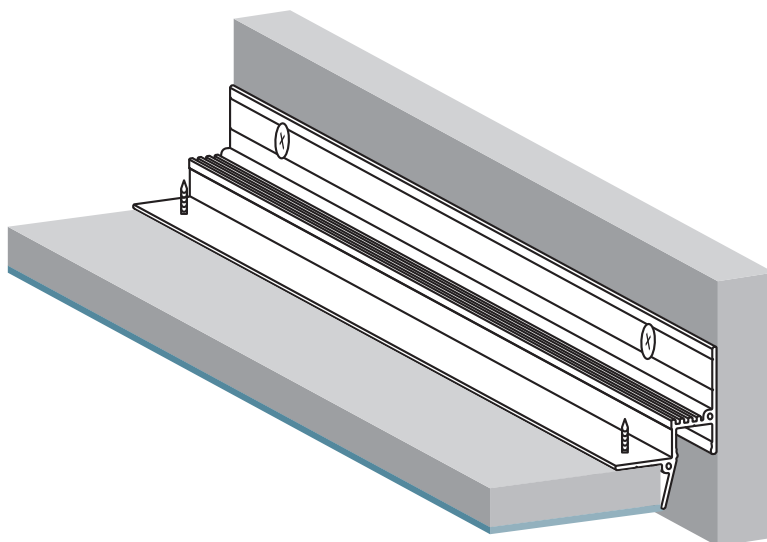


1. Remove the montage cover
2. The profile is ready for next step

LED TAPE INSTALLATION


1

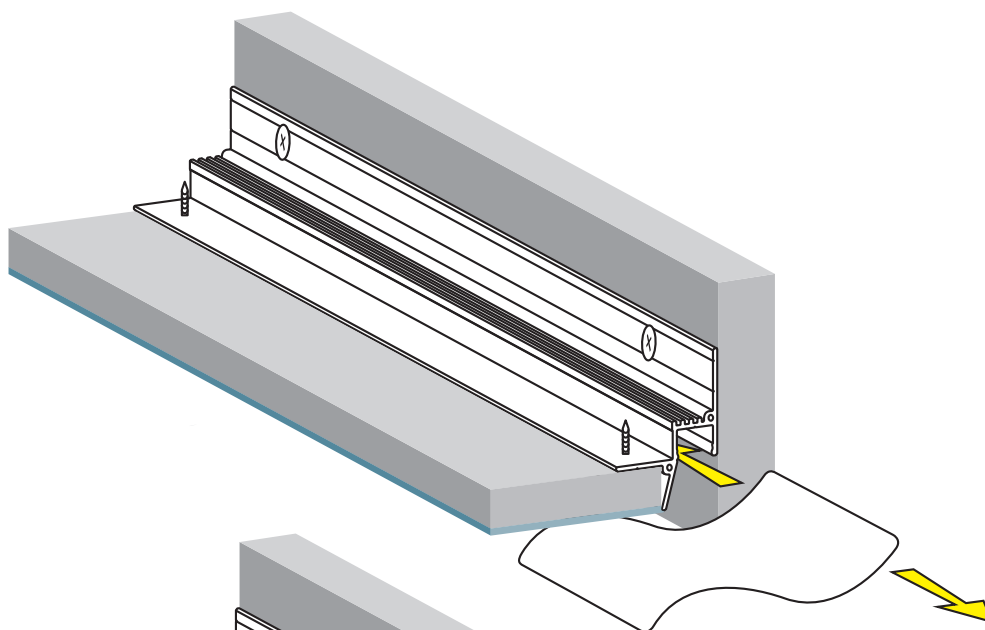

2


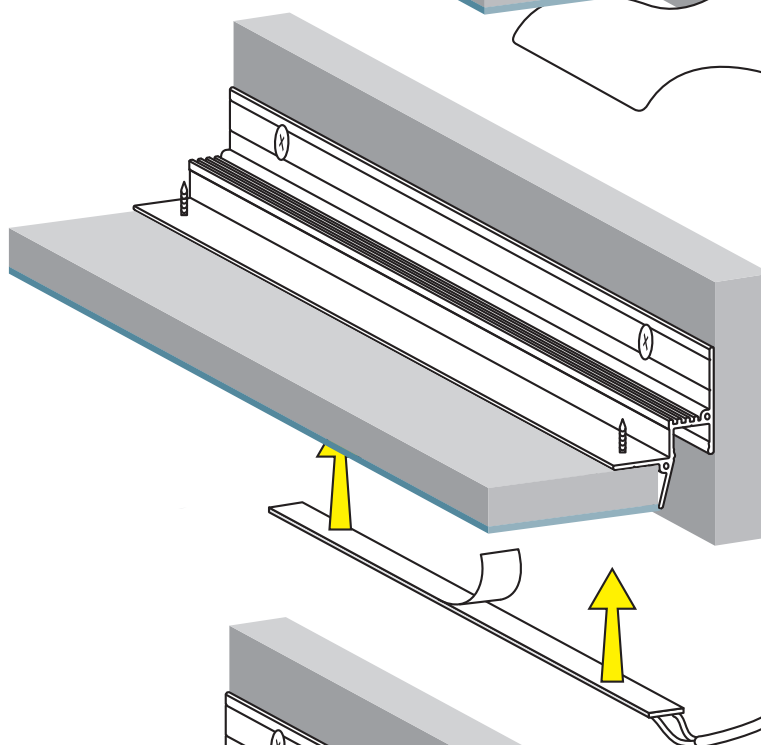


3

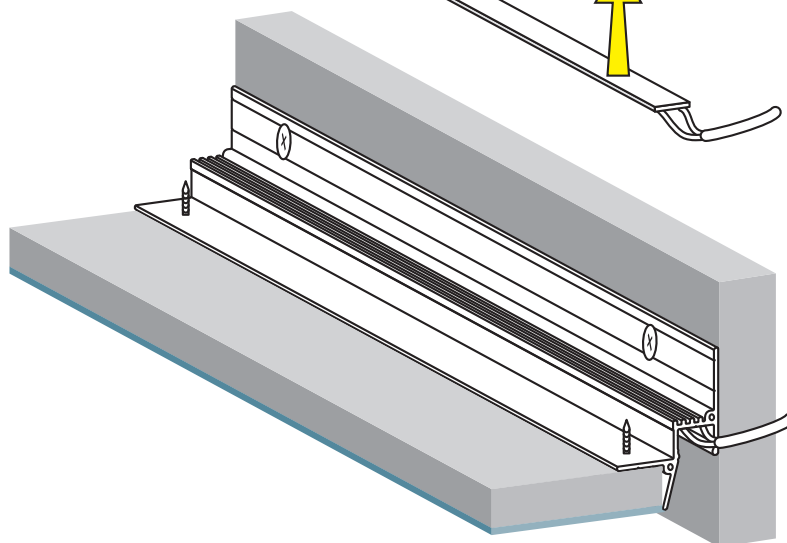

1. Clean the interior of dust and debris
1. Attach the LED tape to the profile
2. The LED tape is installed

COVER INSTALLATION

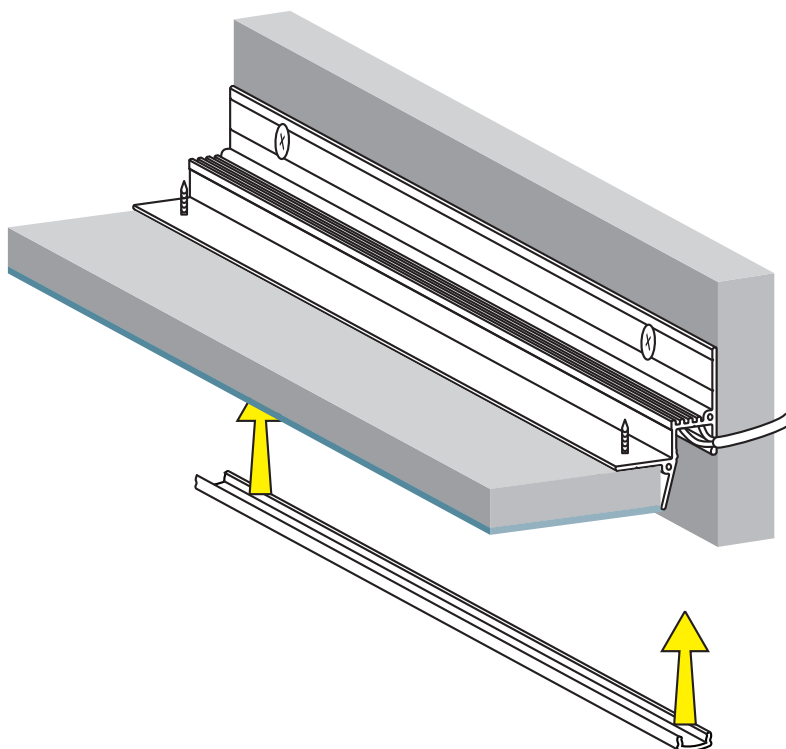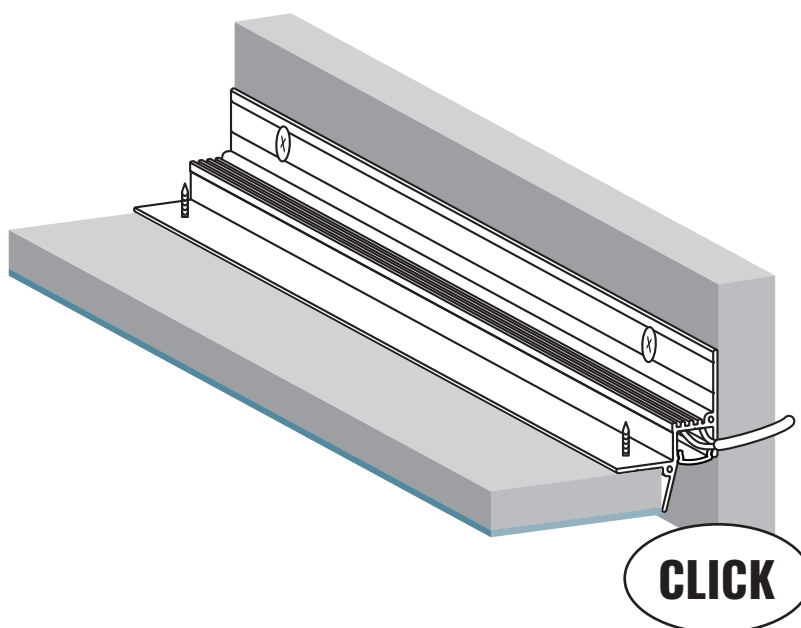1**2**

1. Click the cover into place, starting from one side
2. The cover is installed